



**Standalone (built-in PC), fully automated
CD/DVD Printer Autoloader**

User Manual



Table Of Contents

| | |
|------------------------------------|-----------|
| <i>Quick Start</i> | 1 |
| Getting Started | 1 |
| Mounting the Printer | 2 |
| Operating Environment | 3 |
| Connecting Power | 3 |
| Printer Alignment | 9 |
| <i>Operation</i> | 10 |
| Printer Support | 10 |

Quick Start

Getting started

Carefully remove your system from its shipping box and verify that all parts are present. If there are missing or damaged parts contact *All Pro Solutions* or an authorized distributor immediately to correct any miss-packed or missing parts.

You should find the following packaged with your system:

- ✍ Automatic transport system (Autoloader)
- ✍ Serial Cable
- ✍ Power Cable
- ✍ Signature, Rimage Prism Plus, HP, Teac or Pro III Printer
- ✍ Printer Power Cable
- ✍ Printer Cable (USB or Parallel)
- ✍ Printer Plate (mounted on the bottom of your printer, if printer is included)
- ✍ Printer Control Cable
- ✍ This User Manual
- ✍ Software and Manual (DiscJuggler)
- ✍ 5/64 hex head key (Allen wrench)
- ✍ Warranty card
- ✍ Mouse and keyboard

NOTE:

If your system is damaged during shipment, please contact the freight carrier first, and then contact your distributor or All Pro Solutions.

NOTE:


You should save your shipping materials so that if the need arises you can return your system for service. This packaging was designed specifically for shipping your system. Other packaging may not be as suitable.

Mounting the Printer


This autoloader can be used with Signature, Rimage Prism Plus, HP, Teac or Pro III printer and uses the same mounting system for either one of them. The system comes with an extra CD Drive to be used for downloading printer files into its built in PC. Place your printer on top of the autoloader adapter, matching the blue marks (see Fig. 1 & 2).

Do not tighten the screws until the printer alignment is made. Proceed with “Connecting Power” (see page 3) and “Printer Alignment” (see page 9). When alignment is OK, please tighten in the same time, front left and front right thumbscrews # 2. Repeat this operation for rear left and rear right thumbscrews # 2 and then tighten thumbscrews # 1 (see “Printer Alignment” on page 9).

**Fig. 1
System with Teac P55 printer**

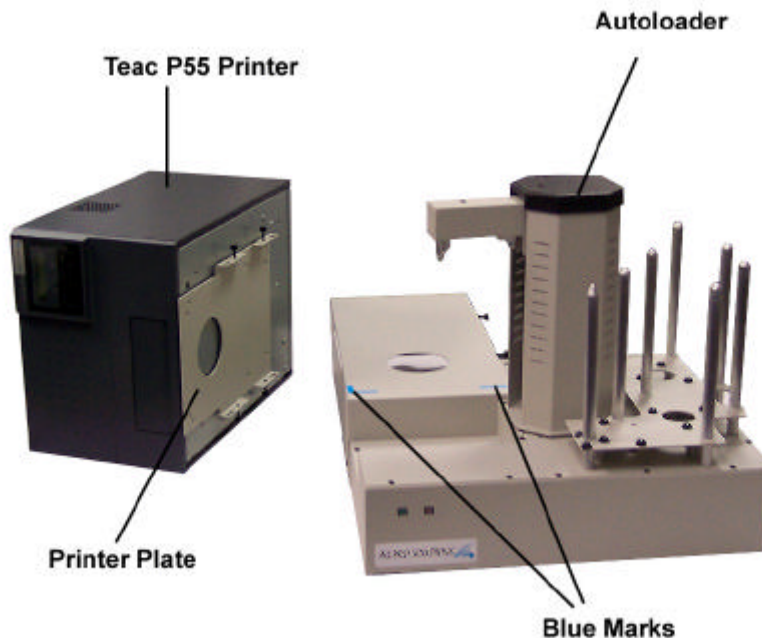

**Fig. 2
Printer alignment**

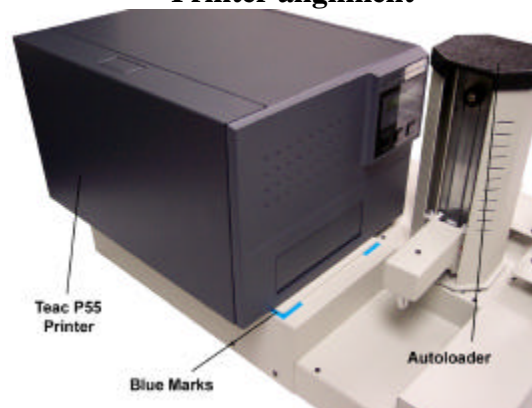

Operating Environment

Your CD/DVD System should be used in a climate-controlled environment free of dirt, dust, excess humidity, excessive heat or electro-magnetic interference.

Allow at least four (4) inches of clearance around the sides and back of the system for ventilation.

Connecting power

Plug one power cable into the printer and another one into the autoloader. Plug each power cable into the proper source and connect all the other cables as shown in:

- Fig. 3a or 3b for system configured with Signature Z6 printer (page 4)
- Fig. 4a or 4b for system configured with Rimage Prism Plus printer (page 5)
- Fig. 5a or 5b for system configured with Pro III printer (page 6)
- Fig. 6a or 6b for system configured with HP printer (page 7)
- Fig. 7a or 7b for system configured with Teac P55 printer (page 8)

Power the autoloader on first, then turn on the printer. You are now ready to align the autoloader arm to the printer.

Fig. 3a
System configured with Signature Z6 printer
(AU4 autoloader – 220 disc capacity / AU7 autoloader – 420 disc capacity)

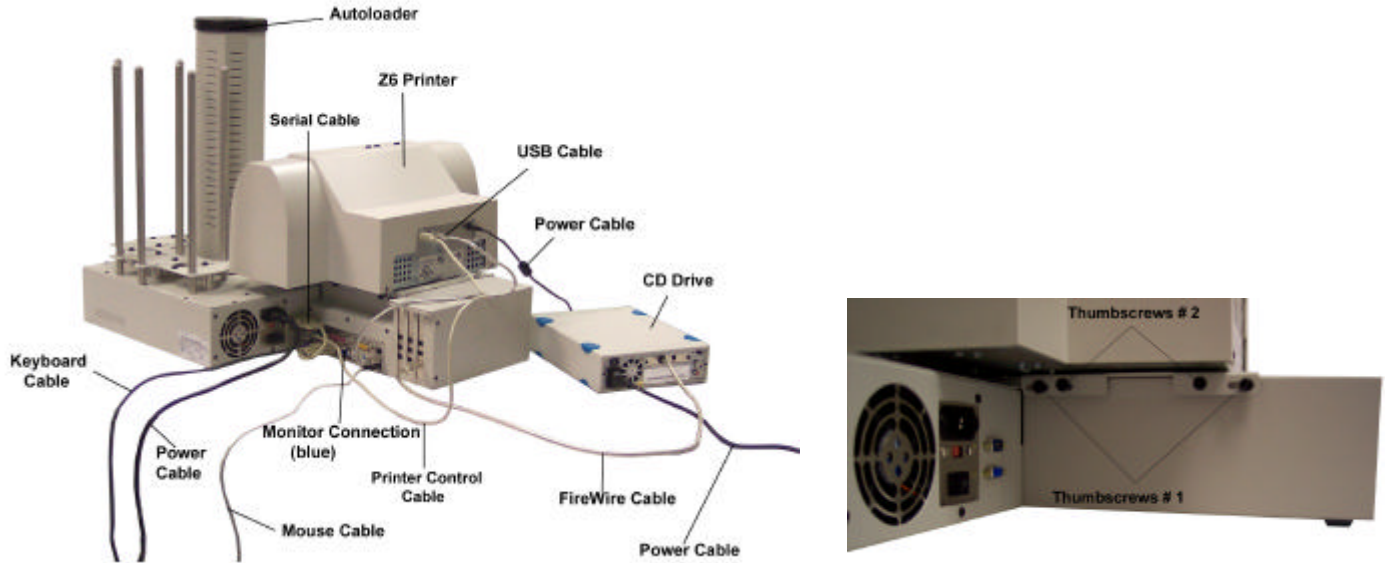


Fig. 3b
System configured with Signature Z6 printer
(AU9 autoloader – 600 disc capacity)

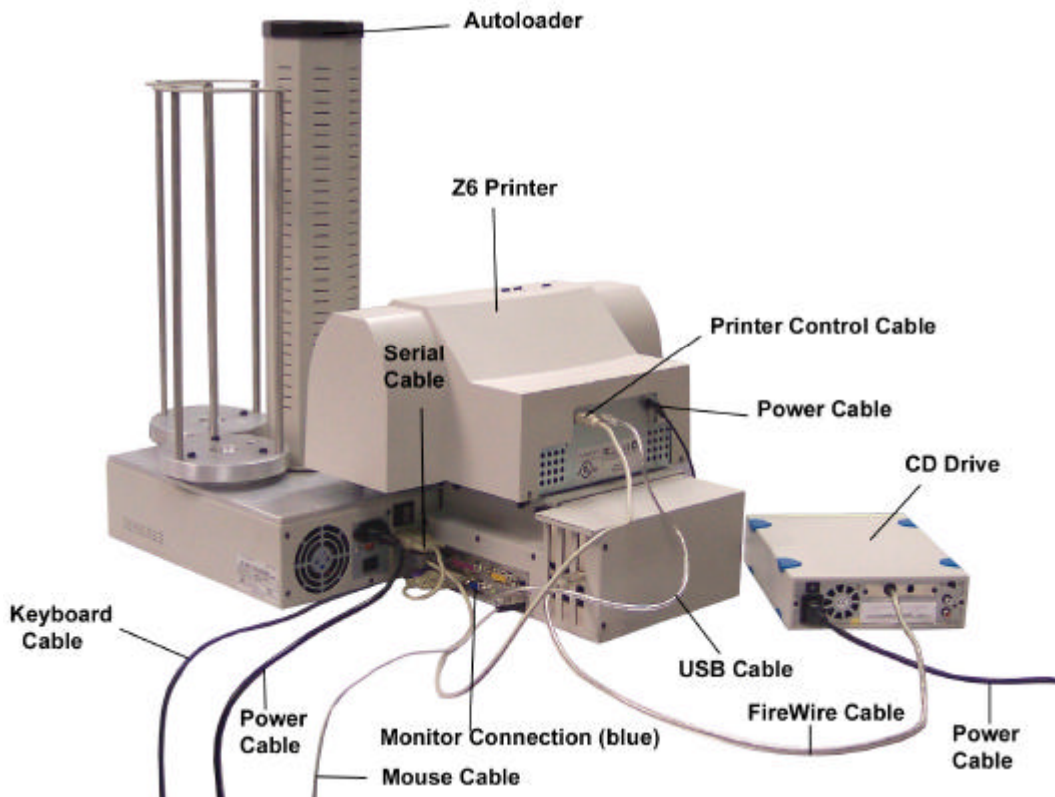


Fig. 4a
System configured with Rimage Prism Plus printer
(AU4 autoloader – 330 disc capacity / AU7 autoloader – 630 disc capacity)

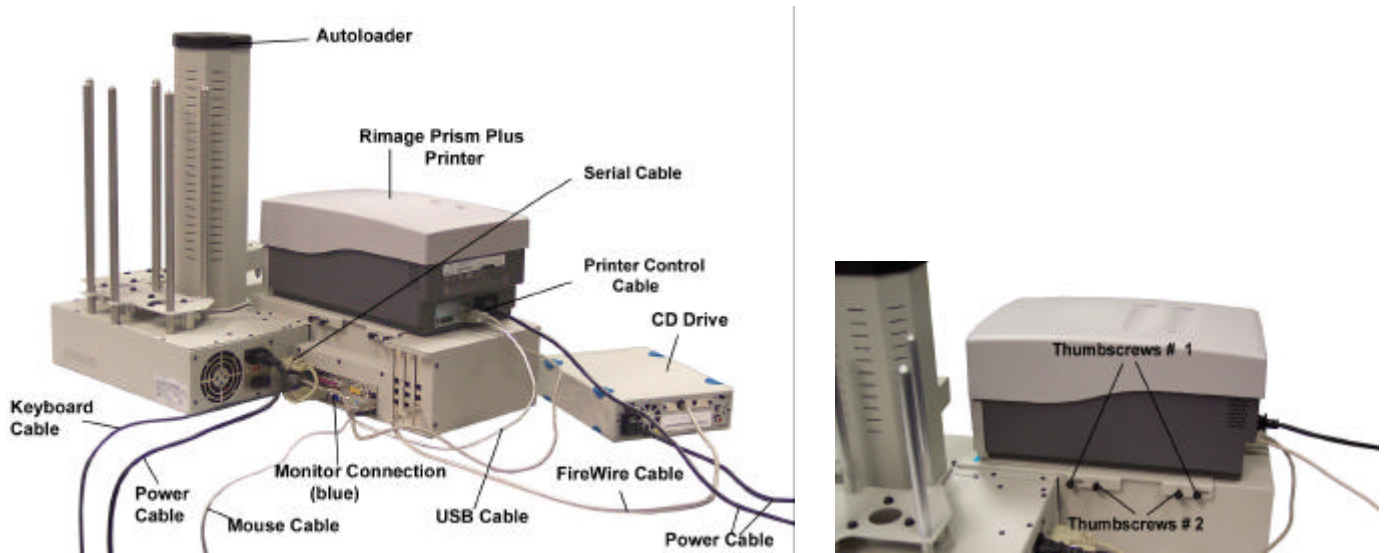


Fig. 4b
System configured with Rimage Prism Plus printer
(AU9 autoloader – 900 disc capacity)

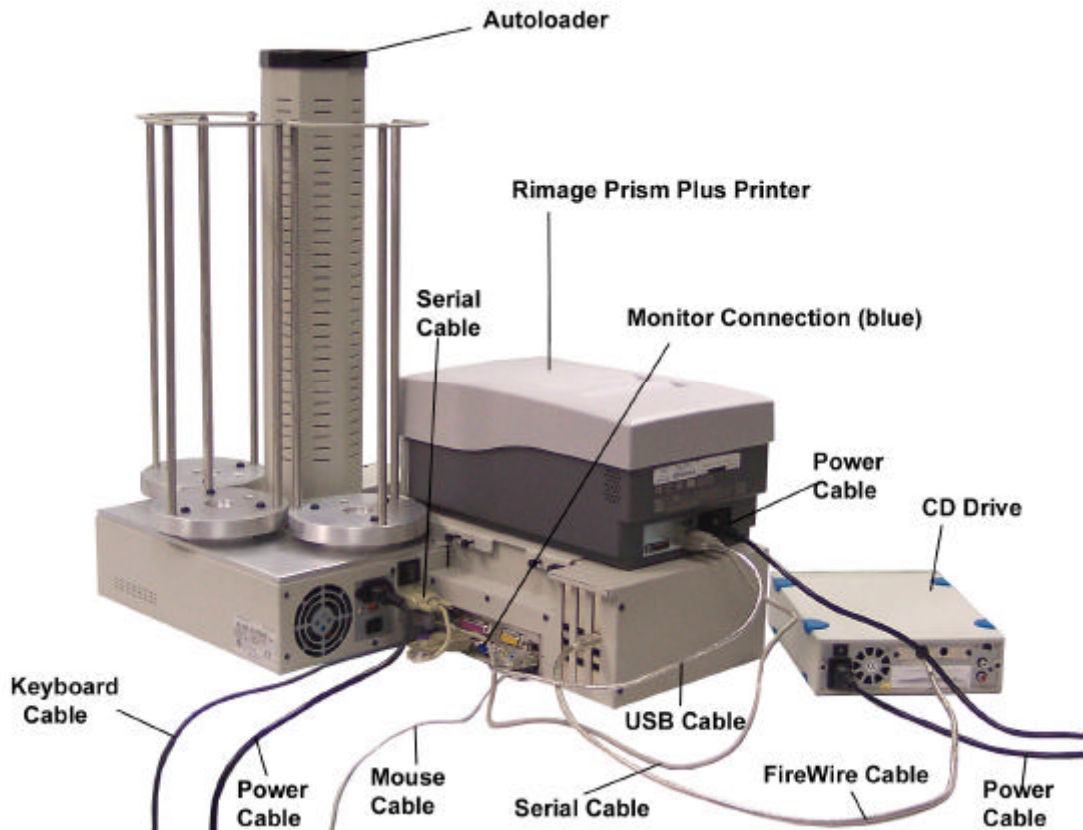


Fig. 5a
System configured with Pro III printer
(AU4 autoloader – 330 disc capacity / AU7 autoloader – 630 disc capacity)

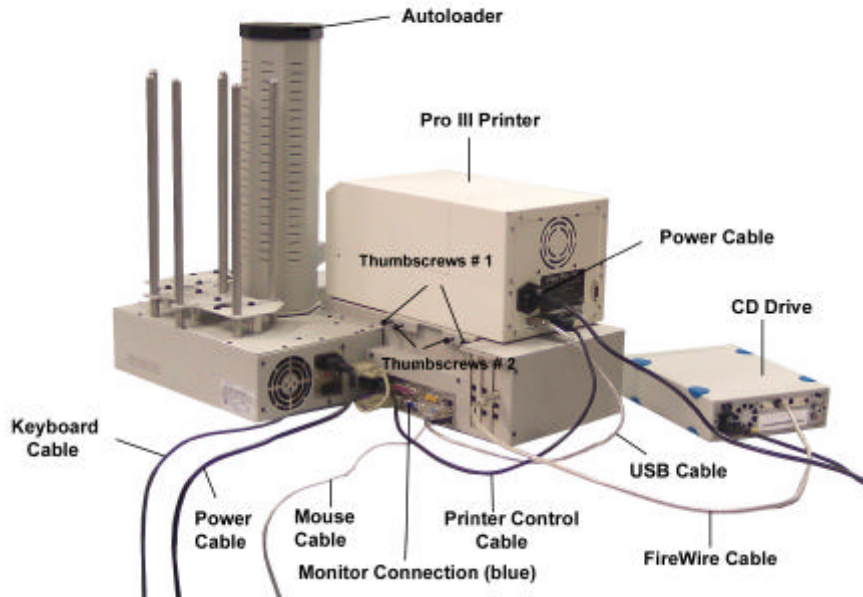


Fig. 5b
System configured with Pro III printer
(AU9 autoloader – 900 disc capacity)

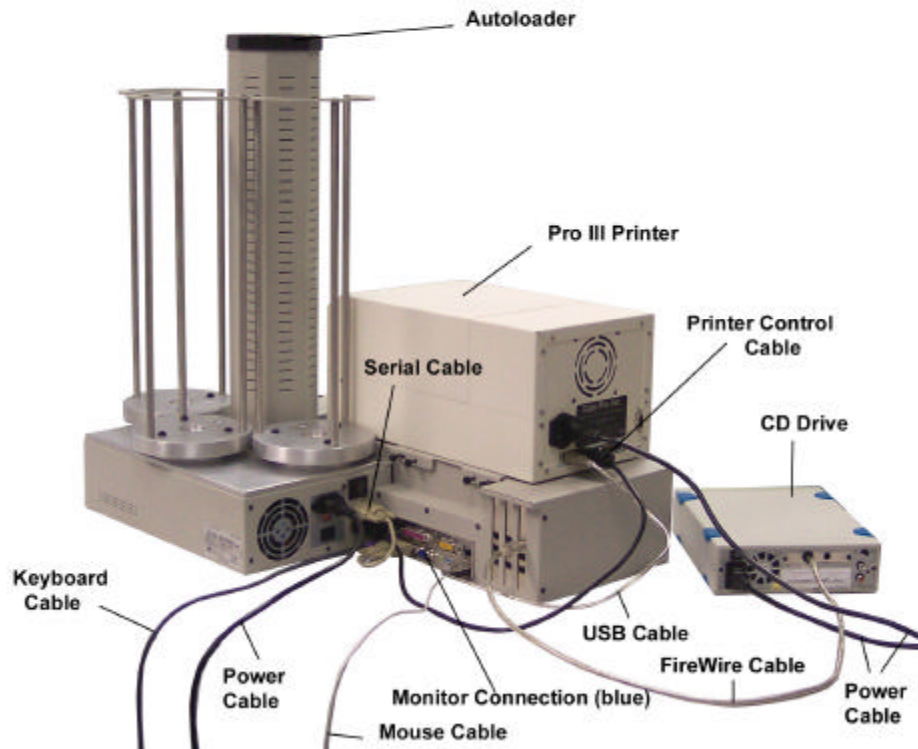


Fig. 6a
System configured with HP printer
(AU4 autoloader – 220 disc capacity / AU7 autoloader – 420 disc capacity)

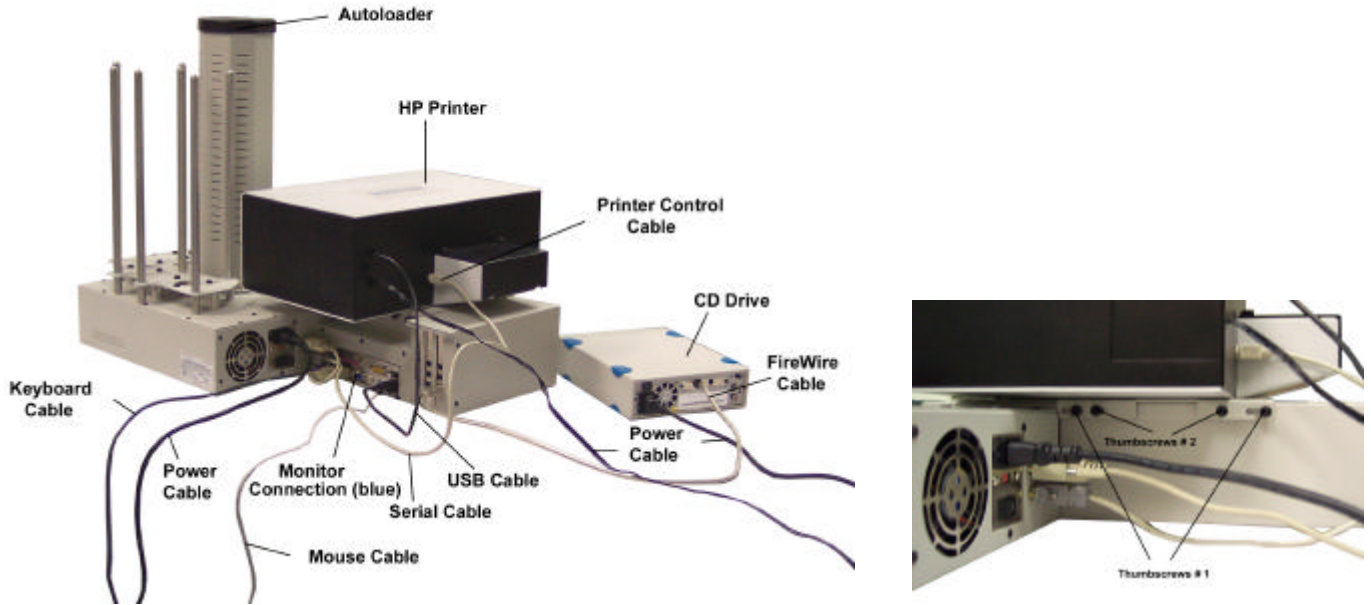


Fig. 6b
System configured with HP printer
(AU9 autoloader – 900 disc capacity)

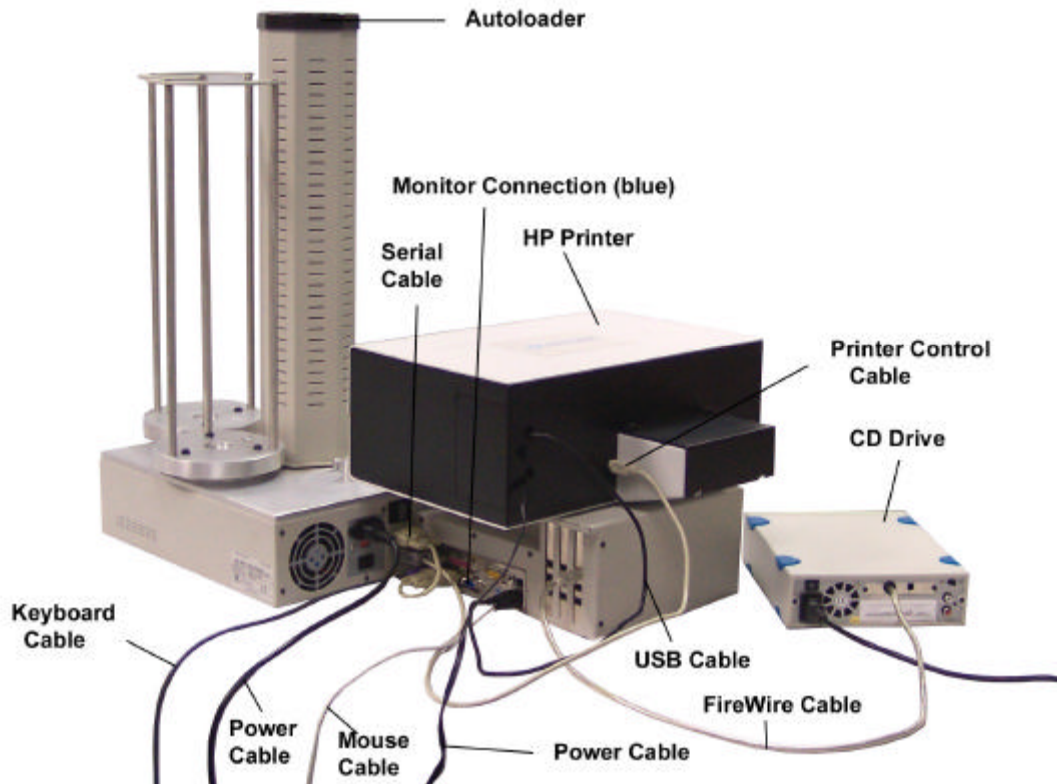


Fig. 7a
System configured with Teac P55 printer
(AU4 autoloader – 220 disc capacity / AU7 autoloader – 420 disc capacity)


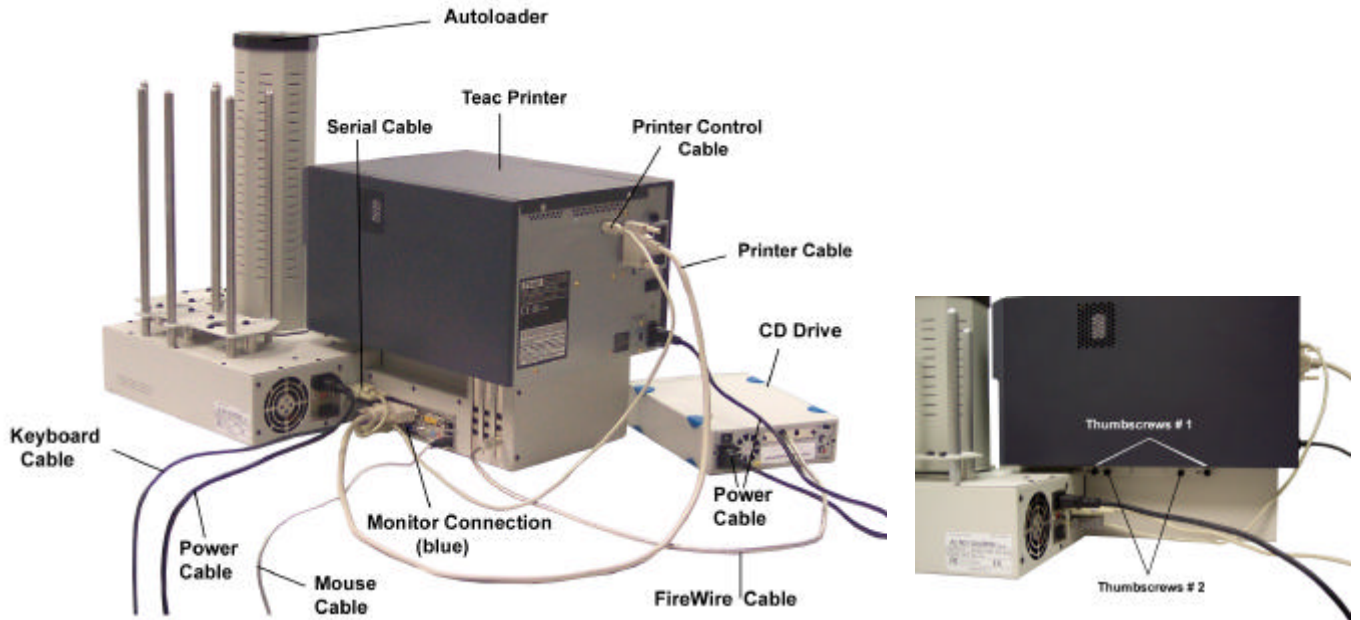


Fig. 7b
System configured with Teac P55 printer
(AU9 autoloader – 600 disc capacity)

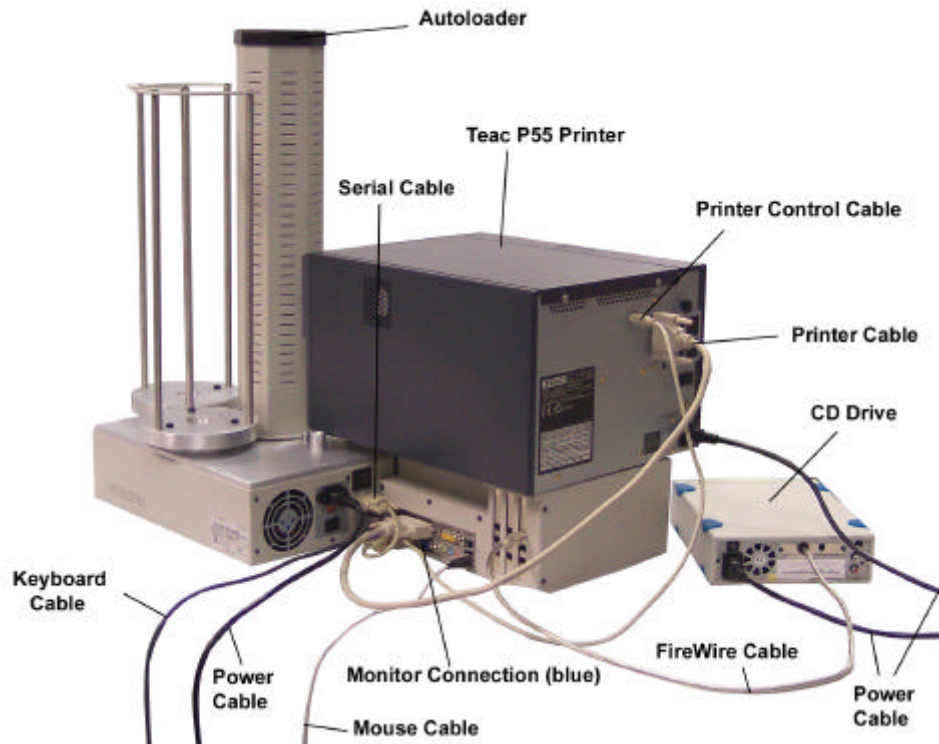

Printer alignment

Make sure the autoloader is turned off.

Click on *Start*, then *Programs*, then *Accessories*, then *Communications* and then *Hyper Terminal*.

Choose a name for the connection. In the *Connect to* window select *Connect using: Direct to COM1/COM2*.

In the *COM1/COM2 Properties*, make sure you have the following settings:

Bits per second: 9600

Data Bits: 8

Parity: None

Stop bits: 1

Flow control: None

Click OK.

Now, turn the autoloader on and in the Hyper Terminal window you should see *Stepper Controller*. Open the printer tray, place discs in the input hopper, press the “Caps Lock” tab (for capital letters) and use the following commands:

I = insert

A = accept

Repeat the above steps until alignment is complete and then tighten the thumbscrews as shown in Fig.3a for Signature Z6 printer; Fig.4a for Rimage Prism Plus printer, Fig.5a for Pro III printer, Fig. 6a for HP printer and Fig.7a for Teac P55 printer.

Operation

Your system comes with all software (required for your configuration) already installed.

Before using the software, you have to assign all the autoloader drives. Please do the following:

Click Programs, then DiscJuggler and double click on Drive Assigner. Select all the autoloader drives, click "Update" and then OK. Now you're ready to use your fully automated system.

*** Please keep in mind, this operation has to be done every time you start the system.**

Printer Support

Please follow the instructions in your Printer User Manual to create a label file.

Once you're satisfied with the layout of your label, please convert it into a .prn File (to be used in connection with the autoloader) as follows:

1. Open your label file
2. Select "Print" from the File Menu
3. Check "Print to file" box on your screen and click OK
"Print to File" window pops-up; type the name of your file, choose the location for your .prn file and click OK
4. Run DiscJuggler and select "tools" from Menu tab, click on "Options" and select "Autoloader" tab. In the "Good Label" box, browse to your .prn file and select it.

For more instructions on operation, please see DiscJuggler (Save the Forest disc) and your printer User Manuals.